


JUNIOR PORTABLE DIGITAL MUSIC PLAYER



HDA-EL2 QUICK START GUIDE

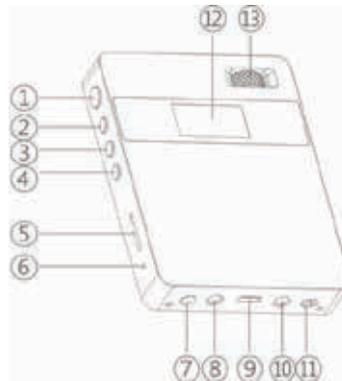

- ① Power/OK
- ② Last song/ Rewind
- ③ Next song/ Speed
- ④ Back/Return to upper level
- ⑤ TF card
- ⑥ Reset
- ⑦ Lock display
- ⑧ Headphones A
- ⑨ USB data / charging
- ⑩ Headphones B
- ⑪ Bass switch
- ⑫ OLED screen display
- ⑬ Volume adjustment

Basic operation

Turn on/off : Long press“ ①power/ok” key for 3 seconds to turn on and then long press 3 seconds to turn off

Play : Click“①Power/ok”key, .Click“①Power/ok”key again to pause.

Last song/ Next song : click“②/③ ”key

Speed/ Rewind : long press“② /③ ”key

Return to upper level : click“④back”key

Affirm the option : click“①power/ok” ”key

Volume increase : rotate “⑬ ”

Charging : It will be fully charged by connecting the charger to standard USB charger to charge for about 3hours while on play mode. (Charger is optional. A standard mobile phone charge can also be used. The output voltage must be 5V with output current ≥700mA)

Charge through a computer : The player can be charged through the USB port of a computer. New hardware will be detected when it's connected to the USB port. You will find the drive of “removable disk” in “my computer”, then follow the set up according to prompts.

living in music



www.atc-lifestyle.com

Play Music

1. Long press “①Power/OK” key to turn on
2. Confirm there are music files to play in the built-in memory or TF card
3. Select folder and music files and click “①Power/OK” to play the music
4. In the play interface, us “④Back/Return to upper level ” to return to menu list and click “①Power/OK” to enter media library
5. There are two special headphone jacks with different toning modes: A for voice and B for instruments. You may match as you like. plugs ⑧Headphones A OR ⑩Headphones B
6. You may match as you like ⑪Bass switch

Available music file formats:

WAV, WMA , APE , FLAC, AAC, ALAC, OGG, MP2, MP3, AIFF, DSF, DFF, DSD, CUE, Maximum support for 192K/24bit sampling rate file playback.

Troubleshooting

- 1.Fail to start up
Charge for 10 minutes to start up or insert a toothpick into the reset hole to reset and then start up.
- 2.Fail to play the music
If the file format is incompatible, you may use transcoding software to transform the files and then try to play again. Check if the music file is damaged or not. Some WMA music may have DRM copyright protection, which cannot be played without authorization. Confirm the headphone is normal and the plug is properly inserted. Confirm volume is normal.

3.Display no power
Check whether power supply is too low and charge for 10 minutes to try again.

4.Operation response of the player is too slow
There will be many fragments in the system after repeated deleting and copying files, which may result in slow response. You may backup files and format the disk to copy files again.

5.No sound in headphone
Confirm volume is not “0” or change a music file to play. Damaged file may result in noises at varying degrees or even in failing to play.

List

Upon receipt, please check the items.

- | | |
|---------------------------------------|---|
| <input type="checkbox"/> EL2 player | 1 |
| <input type="checkbox"/> USB cable | 1 |
| <input type="checkbox"/> Manual | 1 |
| <input type="checkbox"/> Welcome card | 1 |
| <input type="checkbox"/> Pouch | 1 |

Design and specification may be changed or updated without notice.